

DIALING THE PRICES/CODES

Pull the knob out to line up the arrow on the **DIALING SHAFTS** with the appropriate band. Push back when the character is set.



ADJUSTING THE PRINT HEAD

Loosen both **HEAD ADJUSTMENT SCREWS** on both print heads. Move the heads either forward or backward to line up the copy on the label. Tighten the screws.



CHANGING THE INK ROLLER

Slowly squeeze the **OPERATING LEVER** until the **INK ROLLER HOLDER** is exposed. Pull up gently on the **HOLDER** until it locks. Remove the **INK ROLLER** from the **HOLDER**.



Insert a new **INK ROLLER**. Press the **HOLDER** back into position.



IF PRINT APPEARS FADED, REPLACE THE INK ROLLER. ADDITIONAL INK ROLLERS AND INK BOTTLES MAY BE PURCHASED BY CALLING 800-537-9429.

TROUBLE SHOOTING

Problem:

Check the following:

- ⚠️ **OPERATING LEVER** will not move freely.
 - ✓ The **INK ROLLER HOLDER** may be broken and needs to be sent in, postage paid, for factory service.
- ⚠️ **BOTTOM COVER** will not open/close.
 - ✓ Latching mechanism may be broken, not allowing it to close; this part can be unscrewed and replaced. *Slightly* spread the side plates outward to open.
- ⚠️ The bands will not turn freely.
 - ✓ The bands may have become worn or stripped; send it, postage paid, to the factory for service.
- ⚠️ **DIALING SHAFT** has broken or.
 - ✓ This can be easily replaced by unscrewing the broken knob and replacing the **SHAFT**.
- ⚠️ Labels not advancing.
 - ✓ Reload the marker to make sure no excess slack exists; holes on label printing hits between the labels.
 - ✓ Make sure **SPROCKET** is advancing.
 - ✓ Check for adhesive buildup on the **SPROCKET** or **PRINT BASE**.
- ⚠️ Printing is too high/low on labels.
 - ✓ Adjust the heads forward or backward.
- ⚠️ Characters not printing clearly.
 - ✓ Clean the bands with a soft, dry brush. Lint, mixing with ink, will create a buildup on and around the characters of the bands; or replace **INK ROLLER**.

www.applied-inc.c

(888) 327-7301



Part No. 1109-0001

OXYMARK 4 Label Gun

Use OxyMark 4 Labels

(not included) Order the following

1109-0002 Blank Label

1109-0002A Lot and Exp.

1109-0002B Lot and Liters

1109-0002C Lot and cubic Feet

1109-0002LR Replacement Ink Roller



Please Read:

The purpose of this document is to provide general information only. This document does not include all safety or regulatory information you may need for every situation involving the use, storage, transport, delivery, handling and/or refilling of oxygen. It is not possible to include all such safety or regulatory information in this document. This document does not include information on safety, assembly, commodity grade, test, safety procedure or method, precaution, equipment or device relating to the use, storage, transport, delivery, handling and/or refilling of oxygen. Certain situations may warrant further requirements or procedures not included in this document. The risks involved in improper use, storage, transport, delivery, handling and/or refilling of oxygen include fire, serious injury and death. Contact your supplier with any questions regarding specific situations involving oxygen.

The information contained in this document was obtained from sources believed to be reliable and is based on technical information and experience currently available from Applied Home Healthcare Equipment Inc. and others. Please note that Applied Home Healthcare Equipment Inc. and its affiliates, employees, agents and representatives make no guarantee of the results. Applied Home Healthcare Equipment Inc. assumes no liability or responsibility in connection with the information, suggestions or training aids contained herein.

Users are cautioned to obtain the latest edition of all product instructions and/or training aids.

Comments and suggestions are invited from all users for consideration by Applied Home Healthcare Equipment Inc.

For more information and links to the Compressed Gas Association, FDA, DOT and others, please see the reference section of this guide and www.applied-inc.com.


Rev 2, 7-27-06

OPERATION MANUAL


1. When opening bottom cover, be sure to squeeze back end of cover between thumb and fingers. Open label holder, place label roll on hub.




2. Insert labels onto sprocket pins until it extends below labeler.

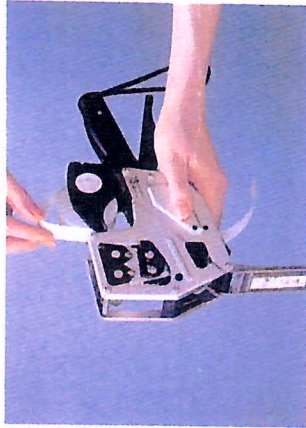

Insert labels through opening of printing plate as shown.

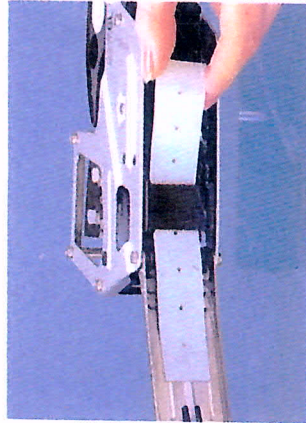



4. Pull out labels toward sprocket pins as shown, close bottom cover. Labeler is for ready operation.

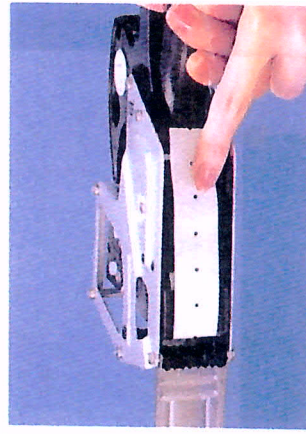

HOW TO REPLACE INK ROLLER

Press handle so ink roller holder comes forward. Then pull it further forward, and release handle. Remove and replace ink roller.

CAUTION : DO NOT RE-INK. THIS MAY RUIN PRINT BANDS.

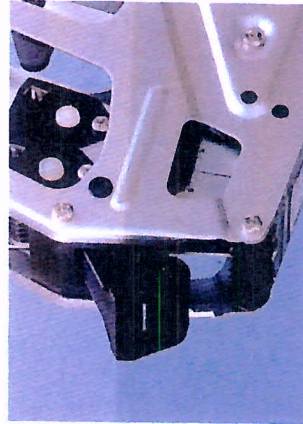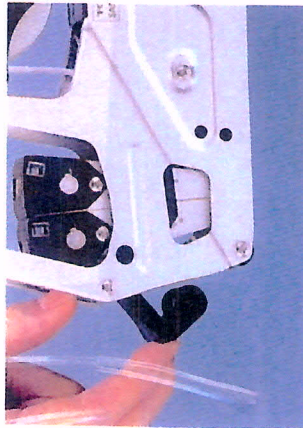


NOTE

We reserve the right to change the specifications without notice for the improvement

Please read the following instructions before operating this machine.

GLOSSARY OF TERMS

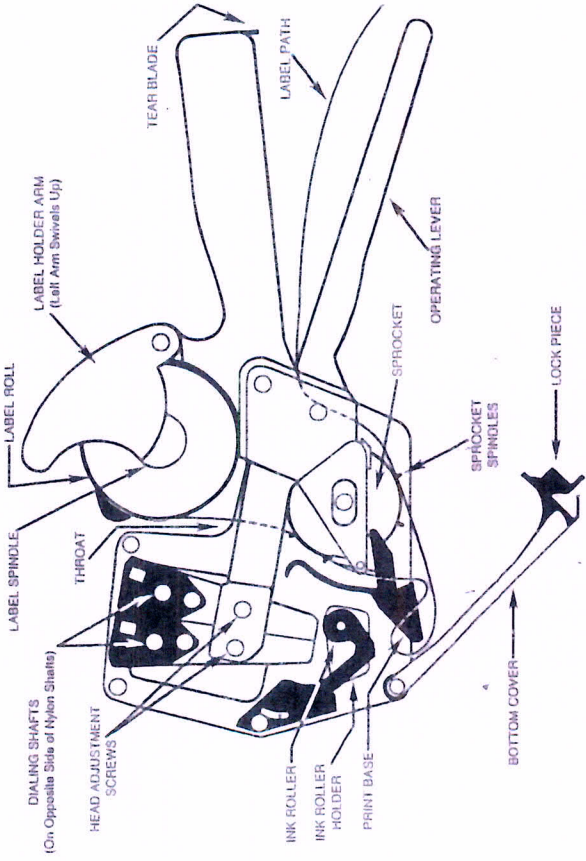

• Facing side plate is shown removed for diagram purpose only.

LOADING INSTRUCTIONS